

OWNER'S MANUAL

BAR HEIGHT ELECTRIC TABLE HEATER

MODEL#HIL-6011





ATTACH YOUR RECEIPT HERE

SERIAL#

PURCHASE DATE

Questions, problems, missing parts? DO NOT RETURN, call our customer service department at 1-888-775-1330, 7 a.m. 4 p.m., MST Monday to Friday

ONE YEAR LIMITED WARRANTY

Receipt required for warranty
Do not return this product to the store where you purchased
it. Please call 1-888-775-1330 for assistance.


IMPORTANT

This product is inspected, tested and carefully packaged to minimize the chance of damage during shipment. If a part (excluding light bulbs and fuses*) within one year from the date of purchase proves to be defective in material or fabrication under normal use, the part will be repaired or replaced. The Company's obligation under the warranty is to replace or repair defective parts at our discretion. Any expenses or damage resulting from the installation, removal or transportation of the product will be the responsibility of the owner and are not covered by this warranty. The owner assumes all other risks arising out from the use or misuse of the product. The warranty will be void if the product damage or failure is deemed by the Company to be caused by accident, alteration, misuse, abuse, incorrect installation or removal, or connection to an incorrect power source by the owner. The Company neither assumes, nor authorizes any person or entity to assume for it any obligation or liability associated with its products. * Light bulbs and fuses are not covered under this warranty.* We are also not responsible if there is damaged cause by the weather or salt water elements if the customer does not protect it as specified in the owners manual. If you have any questions regarding the warranty or service, please call our toll free number: 1-888-775-1330.

> AZ PATIO HEATERS 8550 N 91 AVE, SUITE C-25 PEORIA, AZ 85345 WWW.AZPATIOHEATERS.COM

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	RRECTIVE TION
The unit does not operate properly	1.The power cord is not plugginto an electrical outlet 2.The power switches are not turned on	1.Plug in 2.Choose a setting

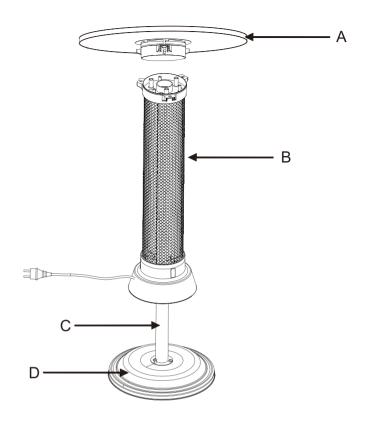


PART	DESCRIPTION	QUANTITY	
Α	Table	1	
В	Heater	1	
С	Tube	1	
D	Base	1	

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. If you have any questions regarding the product, please call customer service at1-888-775-1330, 7 a.m. - 4 p.m., MST, Monday - Friday.

This manual contains important information about the assembly, operation and maintenance of this patio heater. Keep this manual for future reference and to educate new users of this product. This manual should be read in conjunction with the labeling on the product. Safety precautions are essential when any mechanical or propane fueled equipment is involved. These precautions are necessary when using, storing, and servicing. Using this equipment with the respect and caution demanded will reduce the possibilities of personal injury or property damage.

HARDWARE CONTENT

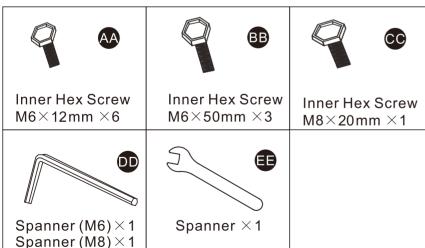

Operation

Connect the power cable to a 13 amp supply that is located in a safe, dry area.

•The switch on the heater is used to control the Heating. (I) for 1500W (II) for 500W/1000W/1500W. The 0 position is off.



- $\bullet \textsc{Once}$ the heater is switched on at Step" I" , the heater is on continually without SENSOR function.
- •Once the heater is switched on at Step "II", one heating element is on always, another two heating elements are with sensor function. When people close to heater within 50CM, the heater is on automatically and separately, and once people are away from the heater after 30 seconds, the heater will be shut off automatically and separately.
- •Although the patio heater is shower proof, do not use when is raining or in wet conditions.
- •Always disconnect the power cable from the electrical supply, when the patio heater is not in use.


Care and maintenance

- When disconnected from the electrical supply, clean the outside of the patio heater with a damp cloth. Never use corrosive or solvent cleaners or immerse in water.
- Any maintenance or repairs including replacing the halogen tube should only be carried out by a qualified electrician or by a recommended service center.

Technical specification

- Power supply 120 V~ 60Hz
- Wattage max 1500w
- Net weight 13.40 kg/29.50 LBS
- Insulation class I
- Height 110 cm/43.3 INCH

Step 2: Place the heater(B) onto the base(D) through the tube(C).

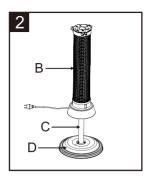

Step 3: Fix the heater(B) to the tube(C) with 1pc M8*25MM Inner Hex Screw(CC).

Hardware Used




M8×20mm Inner Hex Screw <a>
■ ×1





Spanner (M8)

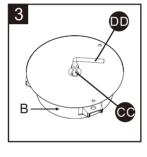

Step 4: Place the table (A) onto the heater (B) and fix them with 3pcs M6x25MM screws(AA).

Hardware Used

Spanner

(M6)




M6 × 12mm Inner Hex Screw €







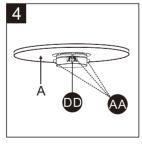

SAFETY WARNING

Only use the halogen heater on a firm solid horizontal area where all the feet on the base are in contact with the floor. (Should the heater be tilted or fall over the cut off switch will activate)

- 1. Sit the heater outside or in a large open area and well away from any obstructions such as branches or where the heater is near any objects that can be effected by heat, such as furniture, curtains or other inflammable objects (3.28 feet or 1 meter).
- 2. Do not use near bath tubs, wash areas or any water.
- 3. Do not use in unventilated areas.
- 4. Do not use where gas, petrol, paint or other inflammable goods are stored.
- 5. Do not push any items through, obstruct or cover the grill of the heater head.
- 6. Do not position directly above or below an electrical socket.
- 7. Do not move when connected to an electrical supply and always wait for the patio heater to cool down before storing away.
- 8. Do not touch the heater head when in use.
- 9. Do not leave or unattend when the heater is on, especially when children and or animals are in the vicinity.
- 10. The indication of the different positions of switches shall be visible from a distance of 3.28 feet or 1 meter.
- 11. The Marking concerning covering shall be visible after the heater has been installed. It shall not be placed on the back of portable heaters.

- 12. The unit must be placed with the clearance of 3.28 feet or 1 meter to the wall and 0.98 foot or 30cm to the ceiling.
- 13. The unit must be correctly installed according to the instructions. Make sure the head is at least 1.8m from the floor.
- 14. The unit must be securely placed on a horizontal and flat surface.
- 15. The unit is at high temperature during operation. It keeps hot for a period after shut down. Potential danger would occur when touching it during this period.
- 16. Don't place the unit close to curtain and/or other flammable objects. These objects may catch fire.
- 17. Don't cover the unit with anything during or after the operation.
- 18. Don't wrap the power supply cord on the unit.
- 19. The unit must be handled with care, and avoid vibration or hitting.
- 20. The unit must be securely grounded during operation.
- 21. If the unit gets damaged, it must be repaired by professional electricians.
- 22. When the power supply cord is damaged, it must be replaced by authorized agent or other professional person to avoid danger.
- 23. The unit must not be positioned under a socket.
- 24. When assembling, keep clear from any wood or flammable material.
- 25. Children must be supervised by an adult when operating this unit.
- 26. It is not safe to install the unit by swimming pool, in a bathroom or near any water.
- 27. The unit is for household use only. It is not safe to use on a building site, greenhouse, barn or stable where there's flammable dust.

- 28. The head of the unit is at high temperature during operation. Unplug the unit and wait till it cools before cleaning.
- 29. Don't use this unit in place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
- 30. Don't use this unit as clothes drier and towel drier.
- 31. Don't use this unit as a sauna heater.
- 32. Don't use this unit as a room heater.
- 33. Don't use this unit in place of animal propagating and raising.
- 34. Don't immerse this unit into water for cleaning.
- 35. The unit should be plugged in a socket, which is easily visible and reachable.
- 36. Two Dark points may exist on the surface of the heating elements during the first few minutes after it is turned on. This is normal, and will not affect the performance of the unit.

ASSEMBLY INSTRUCTIONS

PREPARATIONS

Estimated Assembly Time:20 Minutes
Tools Required for Assembly: Spanner

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact our customer service for replacement parts at 1-888-775-1330, 7 a.m. 4 p.m., MST Monday to Friday.

Step 1: Fix the tube© to the base(D) with 3pcs M6*50MM Inner Hex Screw(BB).

Hardware Used BB M6×50mm Inner Hex Screw Screw

